

EXTERIOR PANEL KIT FOR BUILT-IN CEILING INSTALLATION WITH DUCTED OUTLET LC0618/LC0622


This instruction is an integral part of the booklet of the appliance on which the KIT is installed. Please consult this booklet for GENERAL WARNINGS and FUNDAMENTAL SAFETY RULES.

All the operations must be performed by qualified personnel using the required PERSONAL PROTECTIVE EQUIPMENT.

The kit can only be installed in a HORIZONTAL POSITION WITH DUCTED OUTLET. For installations in a VERTICAL POSITION WITH FREE OUTLET, an EXTERIOR PANEL KIT FOR BUILT-IN INSTALLATION WITH FREE OUTLET LC0578/LC0582 must be purchased.

Before installing the device, check that all necessary water and electrical connections have been set up inside the metal structure.

INSTALLATION OF DEVICE IN METAL STRUCTURE SECURED DIRECTLY TO THE CEILING:

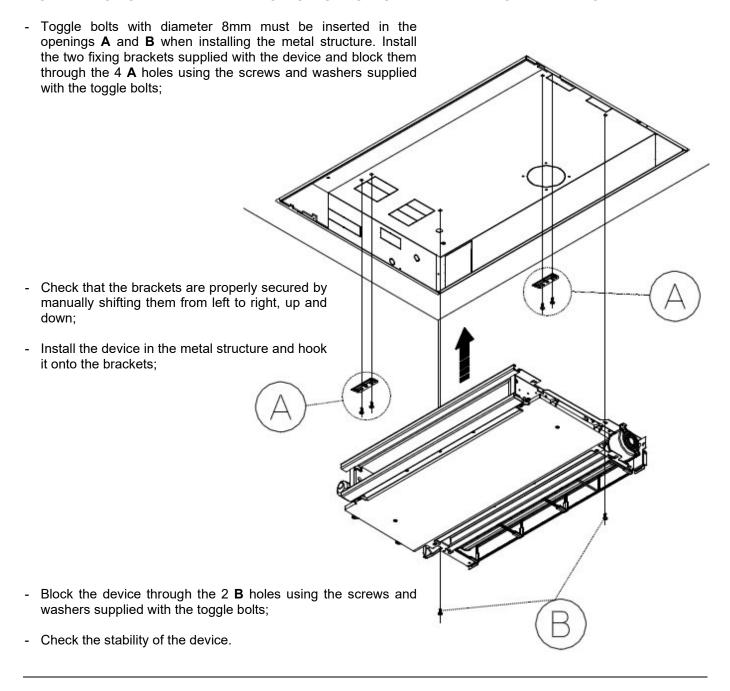


INSTALLATION OF DEVICE IN METAL STRUCTURE SECURED USING ANCHORS DETACHED FROM THE CEILING:

On the metal structure in correspondence with openings A and B, there should be M6 CAGE NUTS, installed during the installation of the structure itself. Install the two fixing brackets supplied with the device and block them through the 4 A holes using the M6 screws, the Grower elastic washers and the washers supplied with BUILT-IN INSTALLATION KITS L00568 / L00572;

 Check that the brackets are properly secured by manually shifting them from left to right, up and down;

 Install the device in the metal structure and hook it onto the brackets;



- Check the stability of the device.


INSTALLATION OF TELESCOPIC AIR OUTLET DUCT DB0160/DB0164;


- Insert the telescopic air duct into the opening of the metallic structure;

- Secure the duct to the device using the supplied M3 nuts and screws.

INSTALLATION OF EXTERIOR FRAME:


- Position the exterior frame near the built-in structure;
- Position it in such a way that it adheres to the wall;
- Secure it to the sides of the built-in structure using the 4 self-threading screws supplied with the kit.

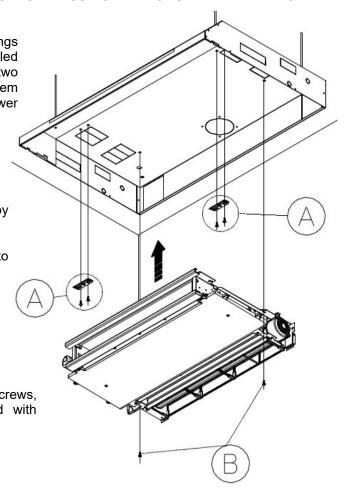

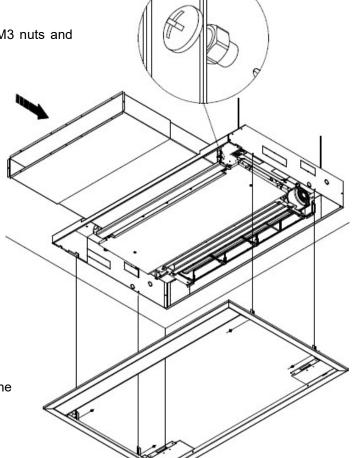

INSTALLATION OF EXTERIOR FRONT PANEL:

- Position the exterior front panel near the built-in structure;

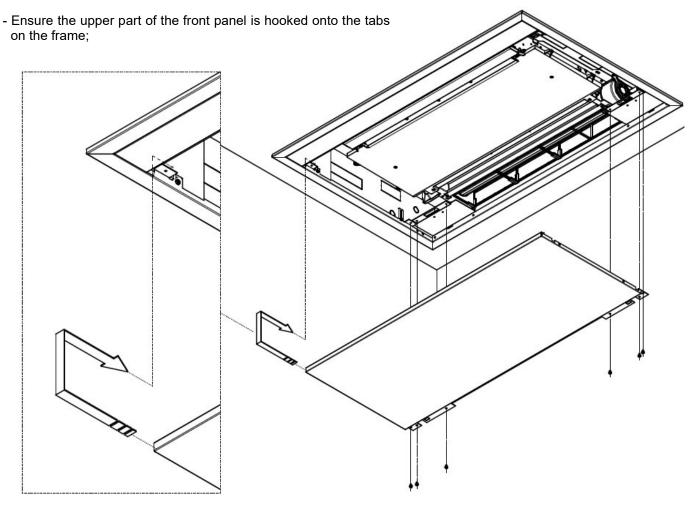


- Screw in the lower part of the panel using the 6 self-threading screws supplied with the kit.

INSTALLATION OF INTAKE GRILL:


Install the front grill safety supports following the instructions reported in the relevant paragraph of the handbook supplied with the device.

- Position the intake grill near the built-in structure;
- Insert the two tabs in the designated slots on the lower part of the frame;
- Close the grill by turning it until the upper teeth are locked in.

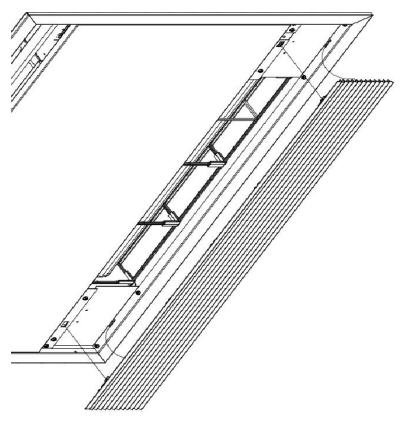



CLEANING THE NETWORK FILTER:


- Remove the front grill by lifting it slightly;

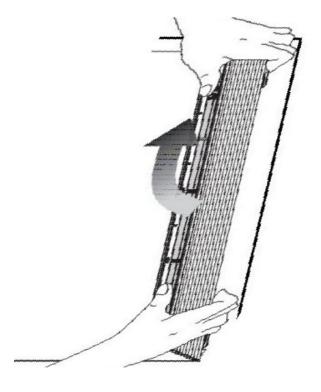

- Turn it until it completely lifts out of its housing;



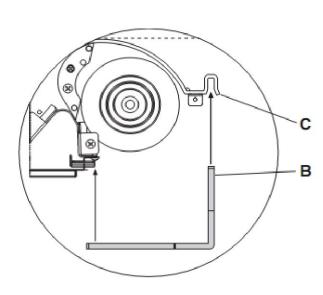

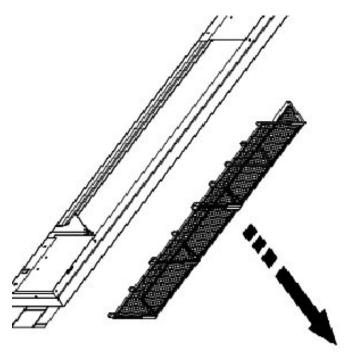

- Replace the filters, taking particular care to insert the lower edge (\mathbf{B}) into its housing (\mathbf{C}) ;

- Close the grill again by turning it until the upper teeth are locked in.